





Metal Base
#900636

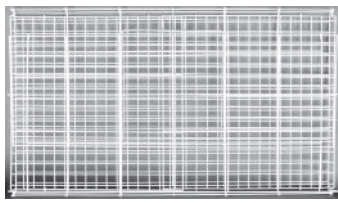


Wire Cage Set
#900637

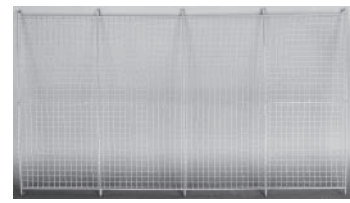

Bottom Wire Rack
#900638


Step 2

Unfold the front, back, and side panels.

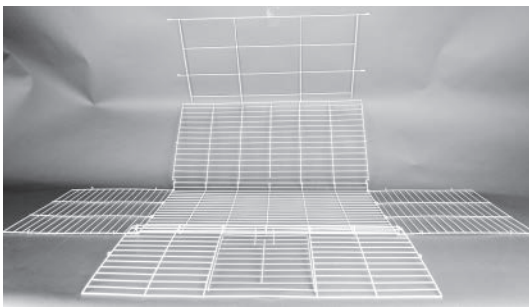

Step 2

Lock the two side panels onto the back and front panels by snapping the wire hook onto the wire frame.

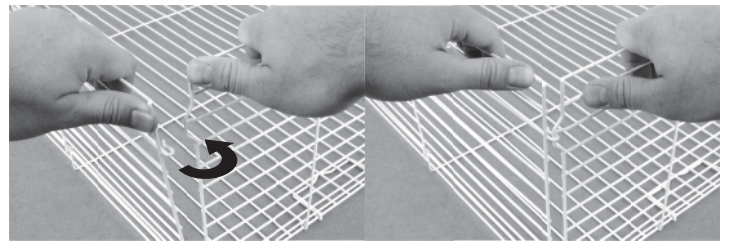


Step 3

Insert the Bottom Wire Rack between the 3rd and 4th wires from the bottom of the cage with the hooks facing towards the cage bottom. Gently pull the front wires of the cage to slip the hooks between the wires.



Step 4

Hook in bottom of cage by gently pushing cage sides in while sliding hooks under.

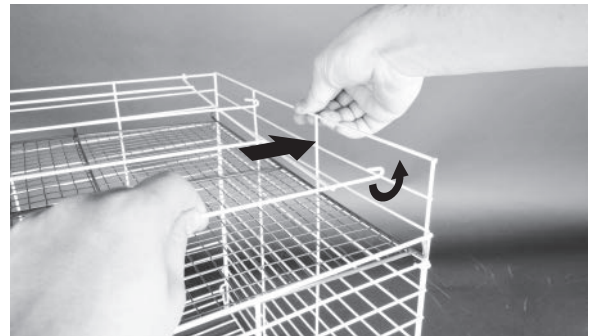

Step 4

Turn the Wire Cage Set upright and slide the middle tray between the cage bottom and Bottom Wire Rack. Insert the Wire Latches on the 6th wire from the bottom. Lock the Wire Cage Set to the Metal Tray using the Wire Latches.

